
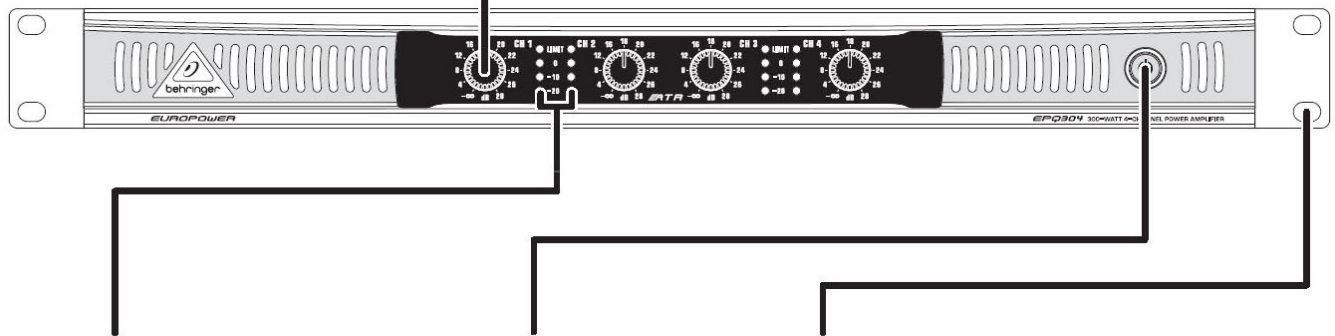


Amplifier Details

Front & Rear Panels

Front

GAIN CONTROLS —
Adjust the input level using these knobs. To increase signal gain, rotate the knobs clockwise; to reduce the gain, rotate the knobs counter-clockwise.

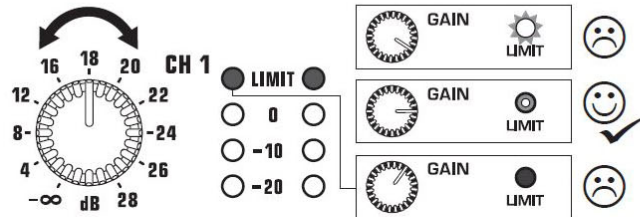


SIGNAL and LIMIT LEDs display the signal level for each channel. Reduce the input gain if the blue LIMIT LED lights up continuously.

POWER BUTTON/LED — Press this button to turn the amplifier on and off.

RACK EARS — Secure the unit into a rack using four attaching screws and washers (fasteners not included).

Rear

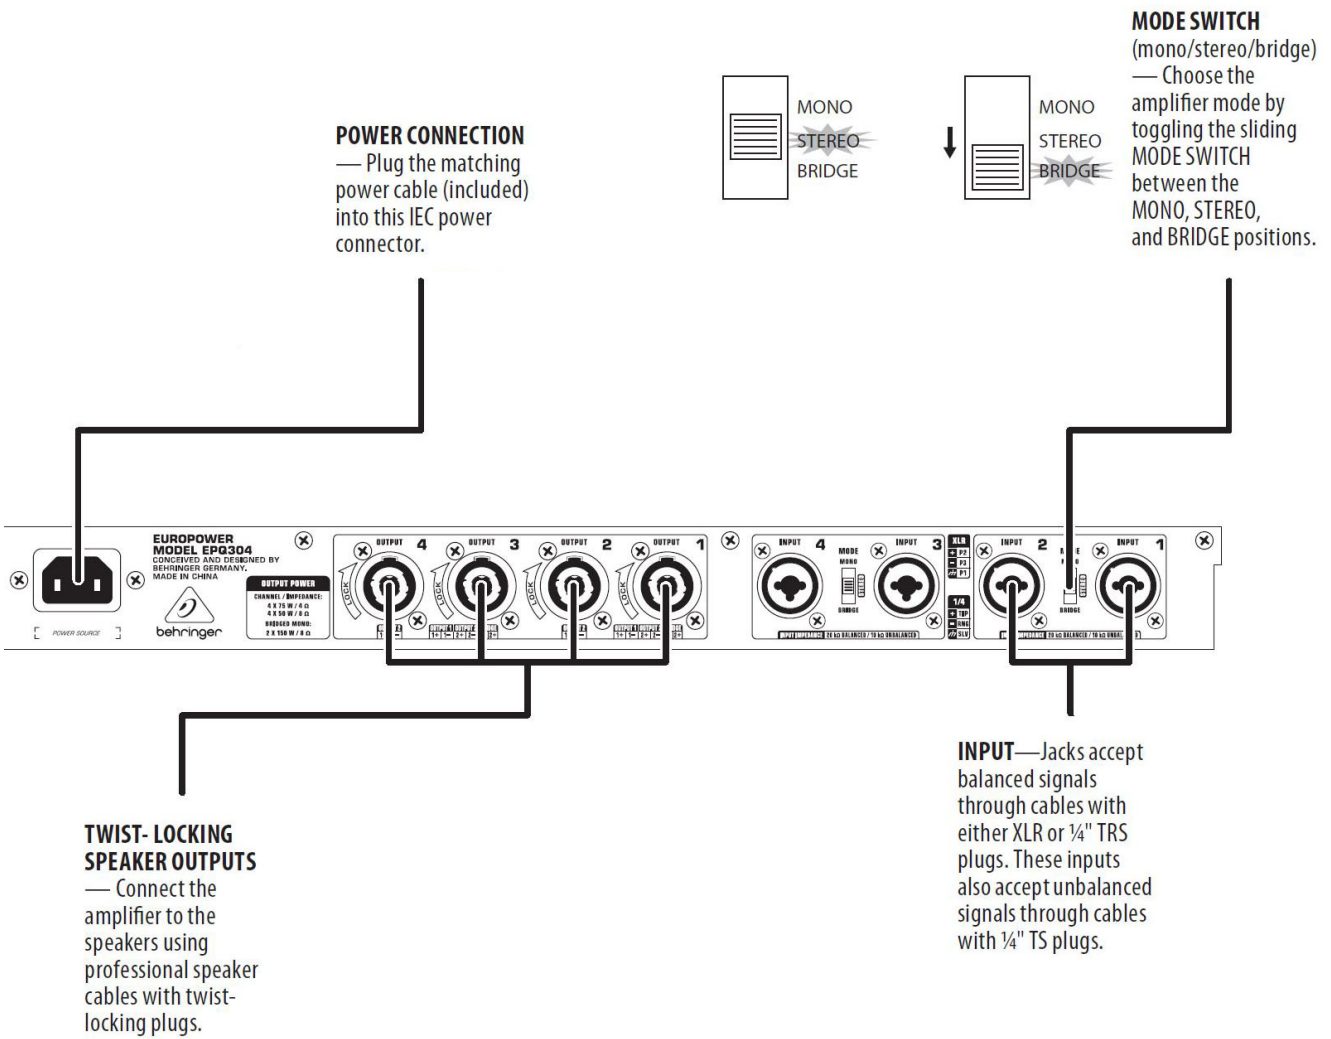

Operation

Note: It is important to check the mode switch to ensure it is in stereo mode for all outputs.

Recommended configuration

| Input / Output Channel | S16 connection | Description |
|------------------------|----------------|--------------------------|
| 1 | Output 1 | Monitor House Left |
| 2 | Output 2 | Monitor House Right |
| 3 | Output 7 | Main speakers House Left |
| 4 | Output 8 | Main speakers House Left |

Note: House Left is left when looking towards the satge.

From:
<https://x32-desk.toft.org.uk/> - **Behringer X32 Manual**

Permanent link:
<https://x32-desk.toft.org.uk/doku.php?id=amplifier&rev=1742732927>

Last update: **2025/03/23 12:28**

