

# Setup Panel details

The setup panel is used to set volume levels, EQ settings, etc.



The four sections are: a) Volume & EQ b) Equalizer c) Bus Sends d) Main Bua


In detail:

## Config / Preamp



This panel....

# Equalizer

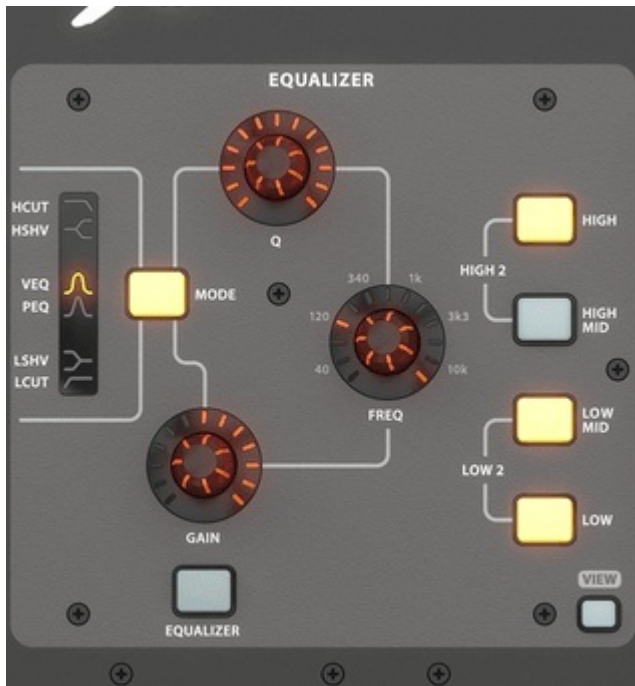

This panel....

# Bus Sends



This panel...

# Main Bus



This panel controls the volume and pan of the main output bus, setting overall volume and left-right pan. The Mono Bus button switches between Stereo and Mono. Generally you will set this to be Stereo

From:  
<http://x32-desk.toft.org.uk/> - **Behringer X32 Manual**

Permanent link:  
<http://x32-desk.toft.org.uk/doku.php?id=setupbank>

Last update: **2026/04/24 07:51**

